

Back height adjustment:

To change the back height (①), lift up the back by putting your force at the bottom of the back, then adjust the back height step by step. Only the back reach the highest position, then can pull down the back to the first position (lowest position).

Armrest adjustment (②):

To adjust the armrest angle, press the button under the top and rotate the armrest to desired position. armrest rotating can be 360 degree.

 
To rise up or lower down the armrest, press the button on the armrest and move up or down.

To move the arm top position, push the top forward or pull backward.

To adjust the arm width, push down the lever to unlock the arm, pull or push the arm to desired position, then pull up the lever to lock.

Seat angle adjustment:

To adjust the seat angle, turn the seat angle adjustment handle (③) backward to unlock and lift up the seat end up or down, then turn forward the handle to lock at the desired position.

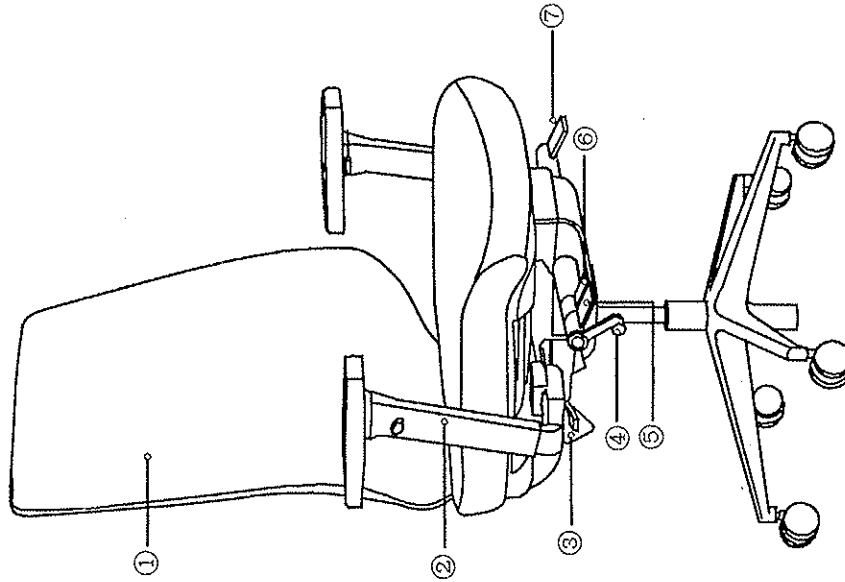

Tilt tension adjustment:

To adjust the seat tilt tension, turn the tension adjustment lever (④) on the mechanism to desired tension, turn clockwise or anticlockwise.

Seat height adjustment:

To raise the seat height, remove weight from the seat and pull up on the height adjustment lever (⑤), release the lever when reaching the desired position.

To lower the seat height, while seated, pull up slowly on the height adjustment lever until the seat is at the desired height.

Seat depth adjustment:

To enlarge the seat depth, push down the slider lever (⑥) and move forward to desired position, then release the lever.

 
To go back to the first position, push down the slider lever and remove body weight from the seat.

Backrest angle adjustment:


To change backrest's position, pull up the adjustment lever (⑦), then lie backwards the backrest to desired position, and push down the adjustment lever to lock.

To go back to the first position, pull up the adjustment lever, lie backwards again and then backrest will return automatically.

PRODUCT INSTRUCTION

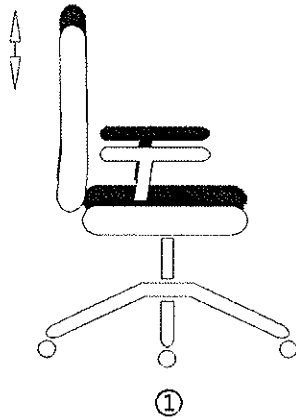

①
Seat height adjustment

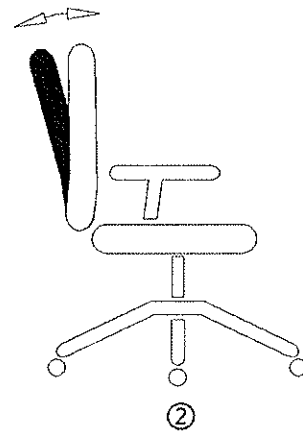 


②
Back tilting adjustment

↑
FRONT

1.Seat height adjustment lever
(Push down to adjust)

 2.Back tilting lock
(Pull out to unlock
Push in to lock)

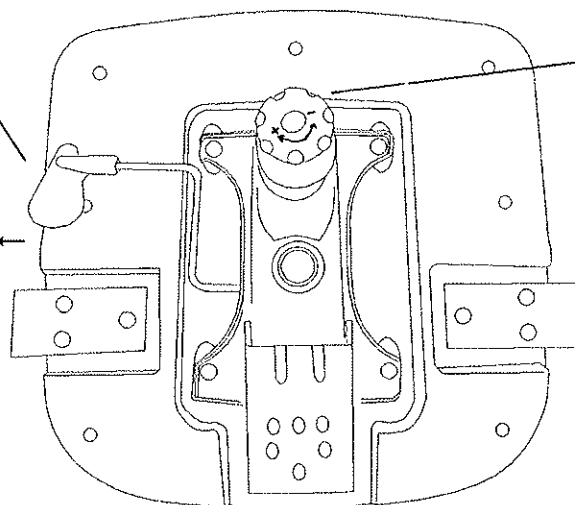

Tighten
Tension Ajustment
Loose